Hirschmann ® Koxha

TrionicSuite Logging



+4966316080120

www.hirschmann-koxha.de kontakt@hirschmann-koxha.de



Johannes-Gutwein Str.8 D-36304 Alsfeld





TRIONICSUITE

Sie können die entsprechende TrionicSuite unter folgende Links beziehen: https://txsuite.org/download/ https://hirschmann-koxha.de/informationen/downloadarchiv/

In den jeweiligen "Extras" befinden sich eine Vielzahl von Firmwaredateien, welche jedoch für uns uninteressant sind.

Laden Sie die entsprechende TrionicSuite für Ihr Fahrzeug herunter, installieren und starten Sie diese.

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731





 www.hirschmann-koxha.de kontakt@hirschmann-koxha.de
 Johannes-Gutwein Str.8 D-36304 Alsfeld

EINRICHTEN DES INTERFACES

File -> Settings -> Realtime settings"

Um das Live Logging an Ihrem Fahrzeug betreiben zu können, müssen Sie nicht nur Ihr Interface auf Treiberebene ordnungsgemäß einrichten und konfigurieren, sondern auch in der TrionicSuite dieses einrichten.

T7Suite

Jser interface settings		
Auto size new mapwindows	Auto load last file on startup	Show mapviewers in seperate windows
Auto size columns in manviewer		
Use red and white mans	Hide symbol window	
Dop't display colors in manyiewer	Auto dock maps from same file	
Show table unside down		Always re-create repository items
Show graphs in manyiewer	New papels are floating	
		No closed loop indicator
Default view size for maps High resolution	screen (1600 * 1200) 👻	no cosca loop indicator
behavit view type for maps Lasy view	•	
General settings		
General settings	☑ Show addresses and lengths in Hex	Request project notes
General settings Auto update checksum Auto fix footer	Show addresses and lengths in Hex Enable CAN logging	Request project notes Project folder C:\Users\Rey\Documen ···
General settings Auto update checksum Auto fix footer Realtime settings	Show addresses and lengths in Hex Enable CAN logging	Request project notes Project folder C:\Users\Rey\Documen •••
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session	Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks	Request project notes Project folder C:\Users\Rey\Documen ···
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session Only P-bus connection	Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks Use wideband O2 (pin 16) with symbol	Request project notes Project folder C:\Users\Rey\Documen ··· Measure AFR in lambda DisplProt.AD_Scanner Configuration
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session Only P-bus connection Use additional CANbus frames	 Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks Use wideband O2 (pin 16) with symbol Auto update SRAM viewers every 	Request project notes Project folder C:\Users\Rey\Documen ··· Measure AFR in lambda DisplProt.AD_Scanner Configuration 20 \$ seconds
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session Only P-bus connection Use additional CANbus frames Reset realtime symbol on tabpage switch	 Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks Use wideband O2 (pin 16) with symbol Auto update SRAM viewers every 	 Request project notes Project folder C:\Users\Rey\Documen ···· Measure AFR in lambda DisplProt.AD_Scanner Configuration 20 seconds Use wideband Q2 on com port
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session Only P-bus connection Use additional CANbus frames Reset realtime symbol on tabpage switch	 Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks Use wideband O2 (pin 16) with symbol Auto update SRAM viewers every 	 Request project notes Project folder C:\Users\Rey\Documen ··· Measure AFR in lambda DisplProt.AD_Scanner Configuration 20 seconds Use wideband O2 on com port
General settings Auto update checksum Auto fix footer Realtime settings Auto generate LogWorks file after session Only P-bus connection Use additional CANbus frames Reset realtime symbol on tabpage switch ANBus adapter type OBDLink SX	 Show addresses and lengths in Hex Enable CAN logging Interpolate timescale for LogWorks Use wideband O2 (pin 16) with symbol Auto update SRAM viewers every Adapter 	Request project notes Project folder C:\Users\Rey\Documen ···· Measure AFR in lambda DisplProt.AD_Scanner 20 ↓ seconds Use wideband O2 on com port Configuration Notifications

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731





T8SuitePro

"File -> Settings -> Realtime settings"

tings		
User interface settings		
🗹 Auto size new mapwindows	🗹 Auto load last file on startup	Show mapviewers in seperate windows
🗹 Auto size columns in mapviewer	Fancy docking	🗹 Use new mapviewer
Use red and white maps	Hide symbol window	Synchronize mapviewers
Don't display colors in mapviewer	Auto dock maps from same file	🗹 Write timestamp marker in binary
Show table upside down	🗹 Auto dock maps with same name	Always re-create repository items
🗹 Show graphs in mapviewer	New panels are floating	🗹 Use T7Suite AFR maps
Default view size for maps High resolution set	creen (1600 * 1200) 🔹	No closed loop indicator 🔹
Default view type for maps Easy view	•	
Auto fix footer	Enable CAN logging	Project folder C:\Users\Rey\Documen ···
Auto generate LogWorks file after session	Interpolate timescale for LogWorks	Measure AFR in lambda
Only P-bus connection	Use wideband O2 (pin 16) with symbol	DisplProt.AD_Scanner Configuration
Use additional CANbus frames	Auto update SRAM viewers every	20 🗘 seconds
🖌 Reset realtime symbol on tabpage switch		Use wideband O2 on com port
ANBus adapter type OBDLink SX 🔹	Adapter COM5 🔻	Configuration Notifications
Videband device	Wideband com port COM5 ~	

Bestätigen Sie die Einstellungen mit "Ok".

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731



 +4966316080120
 www.hirschmann-koxha.de kontakt@hirschmann-koxha.de
 Johannes-Gutwein Str.8 D-36304 Alsfeld

REALTIME

Bevor Sie sich nun mit Ihrem Steuergerät verbinden können, müssen Sie zuerst in der TrionicSuite die **Datei öffnen, die sich auch tatsächlich auf dem Steuergerät befindet**.

Dies erfolgt über: *"File -> Open file"*

Starten Sie nun den Motor Ihres Fahrzeugs und stecken das Interface in die OBD-Buchse.

Wechseln Sie auf den Tab "**Realtime**" und wählen "**Connect ECU**" aus. Das Interface sollte sich nun mit dem Steuergerät Ihres Fahrzeugs verbinden.

Klicken Sie auf "**Toggle realtime panel [SHIFT+F1]**". Die Werte sollten sich nun stetig verändern. Ist dies der Fall müssen Sie nichts weiter tun und können Ihre Testfahrt beginnen. Alle Daten werden hierbei aufgezeichnet.

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731





STATISCHES LOGGING

Obige Methode ist vor allem dann sinnvoll, wenn tatsächliche Probleme auftreten die keine offensichtliche Ursache haben.

Häufiger wird es jedoch der Fall sein, dass wir Sie eher nach dem sogenannten "Knock" und "Misfire Counter" fragen werden.

Grundsätzlich ist der Ablauf identisch mit obigen. Es reicht jedoch die Zündung einzuschalten, um das Auslesen vorzunehmen.

T7Suite

View knock count map View false knock count map View real knock count map View misfire map

T8SuitePro View knock count map View misfire tab

Bitte machen Sie Bilder der Karten z.B. mithilfe des *"Snipping Tools"*, welches standardmäßig auf Ihrem Rechner installiert ist und senden Sie uns diese zu.

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731

Hirschmann ® Koxha

+4966316080120

 www.hirschmann-koxha.de kontakt@hirschmann-koxha.de
 Johannes-Gutwein Str.8
 D-36304 Alsfeld

URSACHEN FÜR MOTORKLOPFEN

Sollte bereits nach kurzen Fahrtstrecken eine große Anzahl Knocks auftreten, bitten wir Sie unverzüglich die originale Software auf Ihr Fahrzeug wieder aufzuspielen!

Andernfalls riskieren Sie besonders schwere Schäden.

Gründe für Knocking können sein:

- Zu mageres Gemisch (zu geringe Fördermenge der Kraftstoffpumpe, Injektoren verstopft/verunreingt; Falschluft)
- Zu hohe Temperaturen (größere Ladeluftkühler schaffen hierbei Abhilfe)
- Schlechte Kraftstoffqualität (Stichwort Oktanzahl und die damit verbundene Klopffestigkeit)
- Defekte an der Zündanlage (z.B. zu alte Kerzen)
- Verstellte Steuerzeiten
- Defekt Kurbelwellenpositionssensor

Tel.: +49 6631 6080120 Mail: kontakt@hirschmann-koxha.de BDO-Nummer: 000591731